


To ensure invisible, strong support, your bracket should extend to within 3-4" inches of the outer edge of your countertop. Here's how to calculate it:

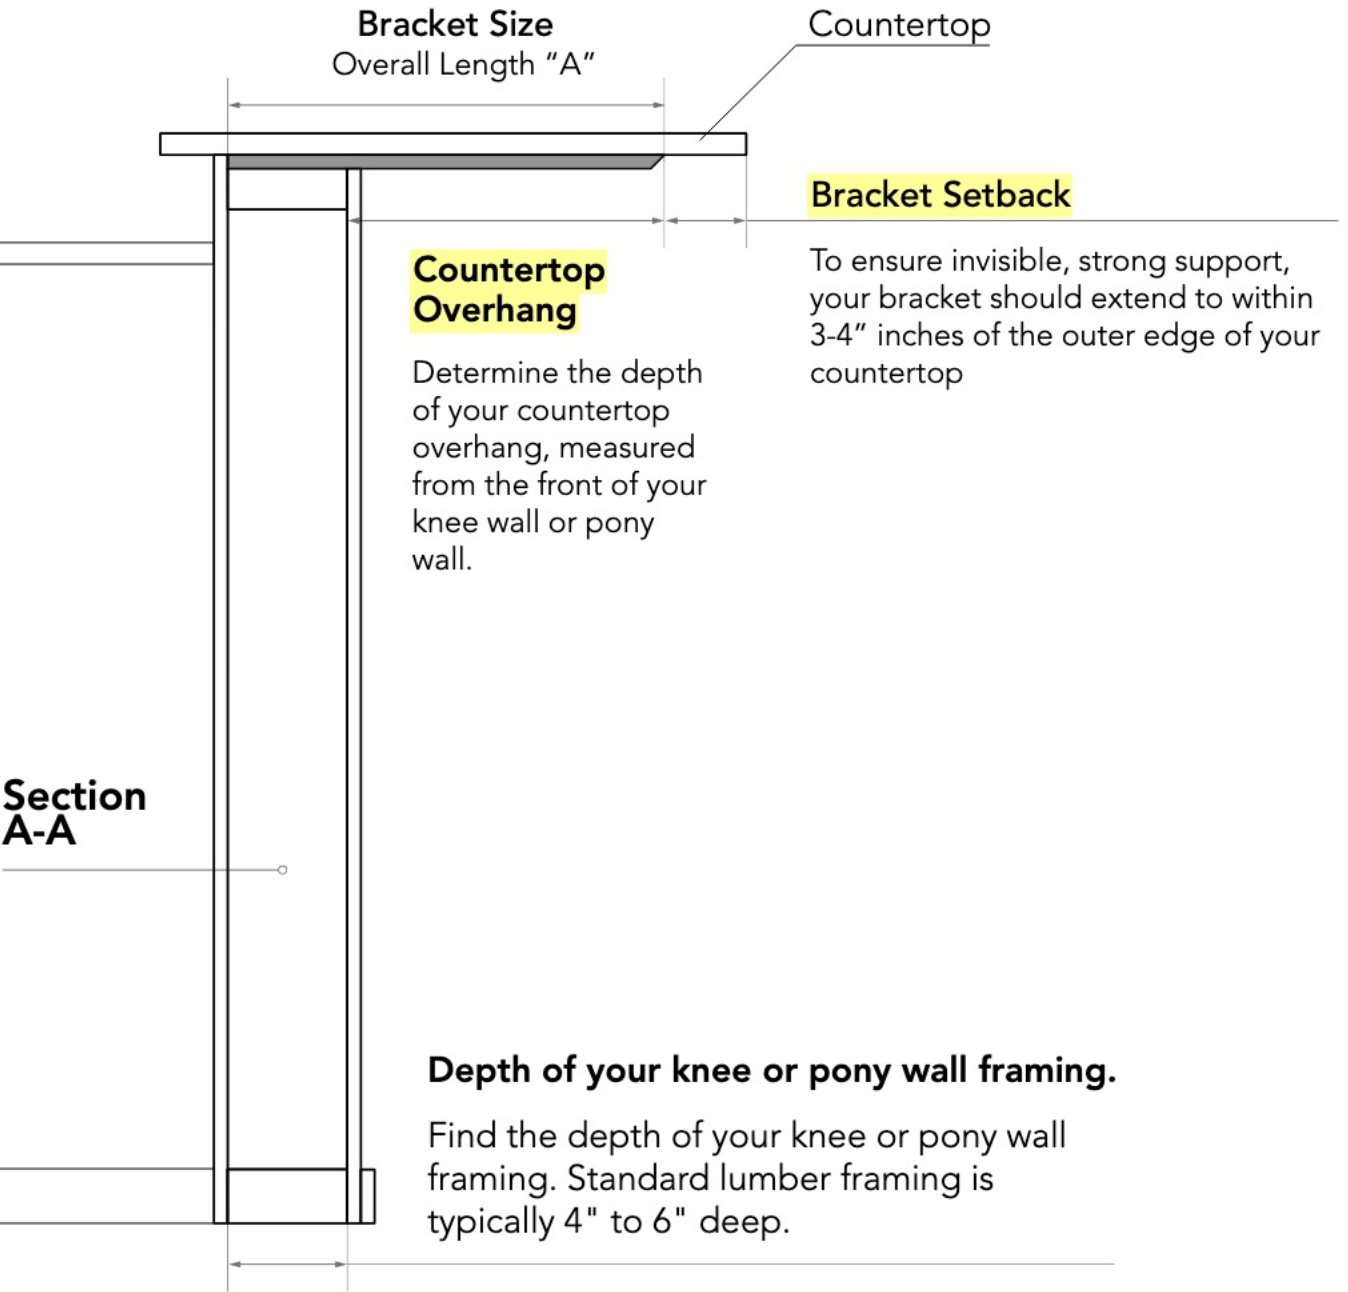

*Our recommendations meet or exceed the general guidelines provided by the Natural Stone Institute (formerly MIA) for safe and effective countertop support. While natural stone and exotic materials can be unpredictable, and man-made solid surface tops may require less support, our recommendations, based on extensive experience, offer a higher level of structural integrity and peace of mind compared to the minimum guidelines for unsupported overhangs.*

